

PROBLEM	POSSIBLE CAUSE	CHECK	SOLUTION
No power to unit	Unit unplugged Power off	Cord plug Circuit breaker	Plug unit in Turn breaker on
Power to unit but nothing operates	On/Off switch off	Switch	Turn to "on" position
	On/Off switch faulty	Continuity of switch	Replace
	Fire extinguisher pressure low	Check indicator arrow (should be clearly in the green or passed it)	Recharge or replace extinguisher
Power to unit, but heater doesn't heat up	Fire extinguisher, pressure switch	Check continuity	Replace extinguisher
	Front panel or filter door off or not completely closed	Check front panel and/or filter door	Adjust front panel to proper position, close filter door
	Grease filter out of place	Grease filter	Install filter properly
Air filter out of place, or filter shim plate out	Air filter	Air filter	Install filter properly
	Shim plate	Shim plate	Install shim plate
Unit will not reset or buzzes when reset switch is depressed	Safety switches out of alignment	Alignment of safety switches	Adjust properly
Unit will not reset	Open circuit in safety switches	Check continuity of circuit with volt meter	Repair wire connections or replace switches
	Fan not running	Fan motor	Replace fan motor
	Bad thermostat or heater element	Check continuity	Replace as necessary
Basket goes up and down but won't stop	Lower switch adjustment	Check adjustment on lower switch	Adjust switch so that cam lever depresses switch lever
	Lever on switch is bent	Switch lever	Remove switch and bend lever out, using two needle-nose pliers and reinstall or replace switch and readjust positioning.
Basket motor does not operate	Wire connection to timer relay or basket motor	Check wire connections	replace or repair loose wire connections, or replace wires
	Timer relay	With timer activated check for 24 volts, if 24v are not present, check transformer	If 24 v are not present replace transformer

PROBLEM	POSSIBLE CAUSE	CHECK	SOLUTION
Basket motor does not operate, no display at timer	Transformer	Check 24v output on transformer	If 24 v are not present replace transformer
Baskets work but bounce up and down	Loose set screw in cam on basket motor	Set screw in cam	Reset cam and tighten set screw
Over Temp light comes on or cycles	Faulty thermostat	Check thermostats	Replace
No display at timer	Transformer	Check 24v output at transformer	If 24 v are not present replace transformer

NOTE

**CALL YOUR EZPRO SERVICE CENTER AT OUR TOLL FREE
NUMBER 1-877-215-7283 FOR ALL OTHER EQUIPMENT
SERVICE REQUIREMENTS.**